

DIODE DYNAMICS


PERFORMANCE LIGHTING TECHNOLOGY

Dodge Ram LED Hyperblink Fix Modules Installation Guide


These small modules will eliminate hyperflashing and bulb out warnings on Dodge Ram trucks with factory-installed LED turn signals (with projector headlamps). These are not for use with trucks with factory-installed incandescent turn signals (quad lamps).

1. Access factory headlamp connectors by removing trim panel above grill, the grill, and the headlamps. All pieces are held in by locking screws and/or standard bolts. To remove the headlamp, you will need to also reach into the wheel well and push up on the locking clip to release the lamp fully. Unplug the lamps and set aside.
2. Identify the wires you will need on the factory headlight connectors. The connector has small numbers, designating pin number. The colors are different on each side, but all three wires are right next to each other, on one side of the connector.

HOW TO USE A T-TAP: Begin by placing the wire into groove and folding T-tap over top of the wire. Then use pliers to clip firmly down. Finish by plugging the connector into end. See picture on the right.

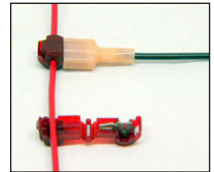

MODULE	PIN	DRIVER WIRE	PASSENGER WIRE
BLACK	PIN 13	BLACK	BLACK
BLUE	PIN 14	BROWN	ORANGE
WHITE	PIN 12	WHITE/GREEN	WHITE/TAN

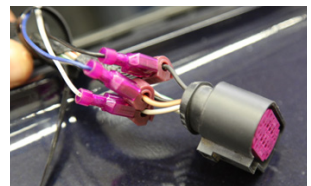

Please contact **Diode Dynamics** should you have any questions about the installation or wiring process, at **314-205-3033** (9a-5p CST) or **contact@diodedynamics.com**.

Visit www.diodedynamics.com to find more products for any vehicle.

**100% SATISFACTION
GUARANTEE**

**3 YEAR
WARRANTY**



